Digital Adapter
Quick Start Guide

Installation and Activation Steps: TV

Step 1:
Connect the Digital Adapter to the Cable Outlet

1: Locate the cable that currently runs from the cable wall outlet to the back of your TV. Leave one end of the cable connected to the wall, but disconnect the other end from the back of your TV.

2: Reconnect this end of the cable to the "**Cable In**" input on the back of the Adapter.

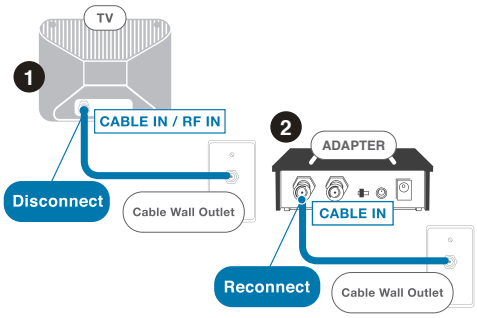

Step 2:
Connect the Digital Adapter to the TV

1: Find the 3-foot coax cable included in this kit. Connect one end of the cable to the "**To TV**" input on the back of the Adapter.

2: Connect the other end to the "**Cable In/RF In**" input on the back of your TV.

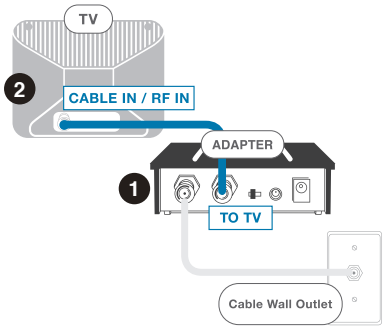

Step 3:
Power Up

1: Plug the round end of the power cord into the "**Power**" input on the back of the Adapter.

2: Plug the other end into a live power outlet or surge protector.

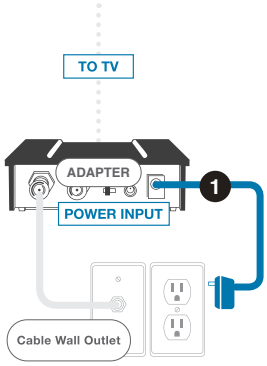

Step 4:
Set the Channel

1: Turn on your TV and tune it to channel 3. Make sure your volume is on.

2: Set the switch on the back of the Adapter to channel 3.

Note: If you do not have a picture after completing the activation, you may need to switch both your TV and Adapter to channel 4.

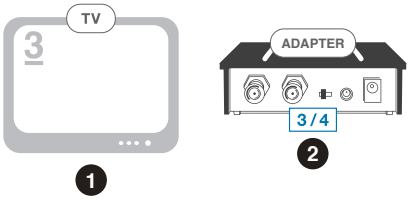

Step 5:
Activate

1: You must connect all Digital Adapters before activating. *If you are going to mount the Adapter to the back of the TV, do not do so until after the Adapter is activated.*

2: Your Digital Adapter needs up to 15 minutes to sync before activating. Check the green light on the front panel. If it's blinking twice, you're ready for activation.

3: Ensure your remote control has been programmed for your TV.

Note: See the "Using Your Remote Control" panel on page 3 for programming steps.

4: To activate your device, call 1.800.888.1300 and follow the prompts or visit mymidco.com.

Step 6:
Confirm Your Service

1: After completing Step 5, wait a few minutes.

2: Make sure your TV is on.

3: Confirm that the Adapter is connected to the power outlet and that the light on the front is solid (not blinking).

4: Using the remote control to operate your Digital Adapter, scroll through your channels and make sure they are all working.

Note: If the light is blinking, or your channels are not showing up, turn to the Troubleshooting section of this guide.

NOTE: Illustrations used in this installation guide are for reference only and may differ from the actual product.

Digital Adapter
Quick Start Guide

Installation and Activation Steps: TV+VCR

Step 1:
Connect the Digital Adapter to the Cable Outlet

1: Locate the cable that currently runs from the cable wall outlet to the back of your VCR (or other recording device). Leave one end of the cable connected to the wall, but disconnect the other end from the back of your VCR.

2: Reconnect this end of the cable to the "**Cable In**" input on the back of the Adapter.

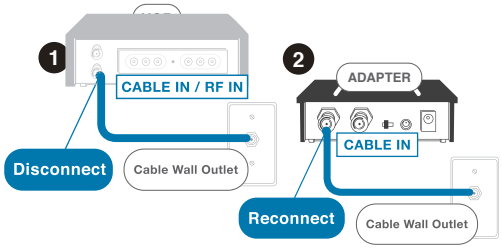

Step 2:
Connect the Digital Adapter to the VCR

1: Find the 3-foot coax cable included in this kit. Connect one end of the cable to the "**To TV**" input on the back of the Adapter.

2: Connect the other end to the "**Cable In/RF In**" input on the back of your VCR.

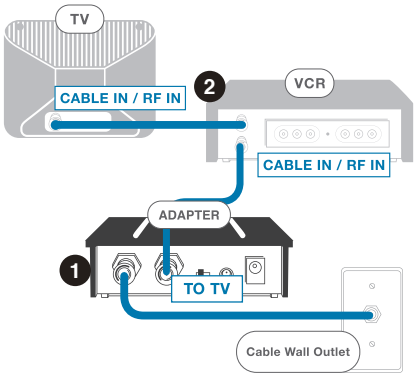

Step 3:
Power Up

1: Plug the round end of the power cord into the **"Power"** input on the back of the Adapter.

2: Plug the other end into a live power outlet or surge protector.

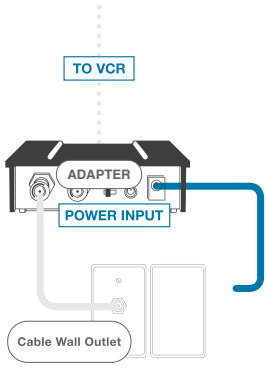

Step 4:
Set the Channel

1: Turn on your TV and tune it to channel 3. Make sure your volume is on.

2: Turn on your VCR and tune it to channel 3.

3: Set the switch on the back of the Adapter to channel 3.

Note: If you do not have a picture after completing the activation, you may need to switch your TV, VCR and Adapter to channel 4.

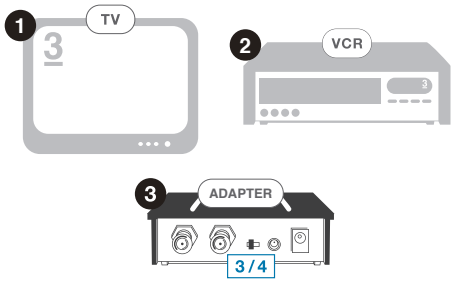

Step 5:
Activate

1: You must connect all Digital Adapters before activating. *If you are going to mount the Adapter to the back of the TV, do not do so until after the Adapter is activated.*

2: Your Digital Adapter needs up to 15 minutes to sync before activating. Check the green light on the front panel. If it's blinking twice, you're ready for activation.

3: Ensure your remote control has been programmed for your TV.

Note: See the "Using Your Remote Control" panel on the next page for programming steps.

4: To activate your device, call 1.800.888.1300 and follow the prompts or visit mymidco.com.

Step 6:
Confirm Your Service

1: After completing Step 5, wait a few minutes.

2: Make sure your TV is on.

3: Confirm that the Adapter is connected to the power outlet and that the light on the front is solid (not blinking).

4: Using the remote control to operate your Adapter, scroll through your channels and make sure they are all working.

Note: If the light is blinking, or your channels are not showing up, turn to the Troubleshooting section of this guide.

Digital Adapter

Quick Start Guide

Troubleshooting Tips

The Digital Adapter will not power on.

A power icon is located on the front panel. If it is illuminated green (either flashing or steady), the Adapter is on. If the power icon is not illuminated:

- Check to see if you have plugged the Digital Adapter into a power outlet that has an on/off wall switch. It is recommended to use an outlet that does not have a wall switch if at all possible.
- Verify that the AC power cord on the back of the Digital Adapter is securely connected and completely plugged into the electrical wall outlet.
- Plug your Digital Adapter into another electrical wall outlet to ensure that the wall outlet you are using is working.

The power light is blinking.

If the power light is blinking, your Digital Adapter is not authorized. You can authorize your Digital Adapter by following step 5 in your instructions or call us at 1.800.888.1300.

- **Long continuous blink:** The Digital Adapter is in a “hunt” mode. This means that it is not ready to be authorized.
  If you tried to authorize your Digital Adapter during the “hunt” mode, the Digital Adapter will not be authorized. Wait until the Digital Adapter shows two short blinks and then try authorizing again.
- **Three short blinks:** The Digital Adapter is updating itself. Wait until the Digital Adapter shows two short blinks and then try authorizing again.
- **Two short blinks:** This means that your Digital Adapter is ready to be authorized.
- Once your Digital Adapter is authorized, a solid power light will indicate normal operation mode.

The Digital Adapter power light is on (not blinking), the TV is on, however programming is not viewable.

- Try a different channel; you may be on an unauthorized channel.
- Check to be sure that your TV is on the correct input setting.
- The TV and the Digital Adapter need to be set to the same channel (either channel 3 or 4). Check the channel on the TV and then set the Digital Adapter to the same channel (3 or 4). You can find the channel toggle switch on the back of the Digital Adapter.
- Check the cable between the TV and the Digital Adapter. If it is loose, tighten the connections.
- Check the cable between the Digital Adapter and the cable wall outlet. If it is loose, tighten the connections.
- Unplug power from the rear of the Digital Adapter for 15 seconds. Plug it back in and wait until the power light is solid.

The remote control does not work.

- Check to be sure the batteries have been installed and they are installed properly.
- Be sure that nothing is between your remote and the Digital Adapter.
- Be sure that you are pointing your remote at the Digital Adapter or the Remote Control Signal Receiver (used when the Digital Adapter is mounted to the back of the TV).

My television has no sound.

- Use your remote to check if the Mute button has been activated. If so, you need to deactivate the Mute button. Make sure the volume is turned up on your television.
- Unplug power from the rear of the Digital Adapter for 15 seconds. Plug it back in and wait until the power light is solid.

My remote will not control my TV.

- The remote control must be programmed to your TV; instructions are included with your remote. If you have programmed your remote control, try to program it again.
- Check the batteries to be sure they are installed correctly.
- Be sure you are pointing the remote at the TV.

NOTE: Illustrations used in this installation guide are for reference only and may differ from the actual product.

Digital Adapter

Quick Start Guide

Using Your Remote Control

The Digital Adapter you received will have the remote control illustrated below. Follow the appropriate instructions to program the remote for use with the Digital Adapter and your TV. For additional information or troubleshooting, please refer to the user guide included with the remote control.

1. Turn TV on.
2. Press OK then Mute and hold both buttons until the indicator light at the top of the remote illuminates.
3. Locate the 3-digit code(s) for your TV found in the remote user guide.
4. Enter the 3-digit code(s) one at a time using the keypad on the remote. As soon as you have entered the 3-digit code that turns your TV off, press MUTE.
   a. If the TV turns back on, press OK to lock in the code. The indicator light will blink and then go out.

      OR

   b. If the TV does not turn back on, enter a different 3-digit setup code until your TV turns back on. Then press OK to lock in the code. The indicator light will blink and then go out.

OR

1. Turn TV on.
2. Press and hold the SET button until the indicator light at the top of the remote blinks twice.
3. Locate the 5-digit code(s) for your TV found in the remote user guide.
4. Enter the first 5-digit code using the keypad on the remote. Aim the remote at the TV and press the POWER button once.
   a. If the TV turns off, the remote is programmed.

      OR

   b. If the TV does not turn off, repeat step four with the next 5-digit code until the remote is programmed.

Using the Remote Control Signal Receiver

In order for your remote to work properly, the Digital Adapter needs to be visible or use the Remote Control Signal Receiver.

If you want to mount the Digital Adapter to the back of the TV so it is out of sight, or if the signal from the remote will not reach the Adapter in its current location, use the Remote Control Signal Receiver.

Plug the smaller end of the Remote Control Signal Receiver into the “IR In” port on the back of the Digital Adapter. Position the other end of the Remote Control Signal Receiver where it can be seen from the front of the TV.

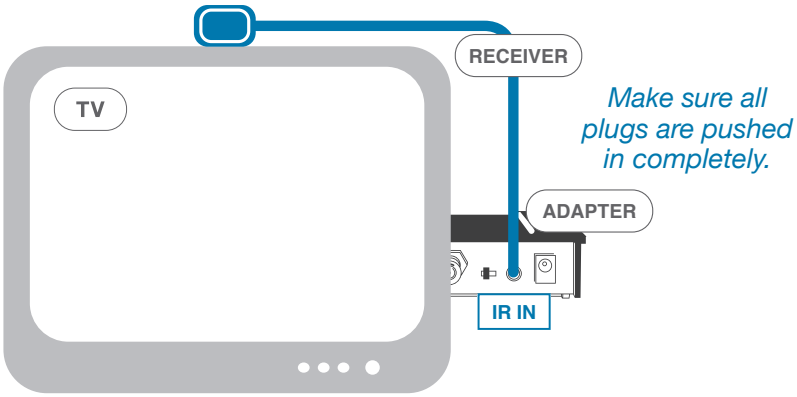

MC53 UG 1211

NOTE: Illustrations used in this installation guide are for reference only and may differ from the actual product.